

Double Shower Door Towel Bars / Handles Installation Instructions

CALIFORNIA FAUCETS RECOMMENDS THAT ALL PLUMBING PRODUCTS BE INSTALLED
BY A LICENSED PROFESSIONAL


IMPORTANT: Read all instructions prior to installation and provide copy of instructions to consumer.

0 GLASS PANE REQUIREMENTS

- Glass thickness shall be 3/8" [10mm] to 1/2" [13mm]
- All through-holes shall be Ø1/2" [13mm] in diameter
- See table below for correct distances between through-hole centers

SKU	A [mm]
SD-TBD-XX-08	8" [203]
SD-TBD-XX-12	12" [305]
SD-TBD-XX-18	18" [457]
SD-TBD-XX-24	24" [610]

"XX" represents series




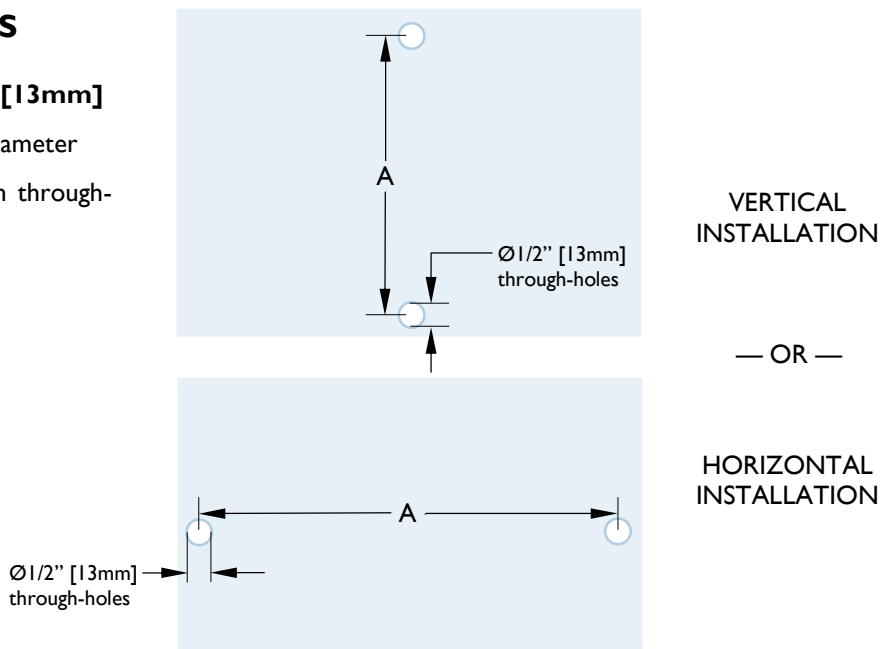


I INSTALLING COVER PLATES

IMPORTANT: Ensure that there is always an O-RING (2) on every BASE RING (3) and COVER (1) when mounting to glass pane

NOTE: BASE RING o-ring groove shall be towards glass


- Place O-RING (2) into groove of both BASE RINGS (1)
- Position BASE RING (1) over through-hole
- Insert SCREW (3) through PLUG (4) & BASE RINGS (1)

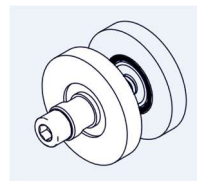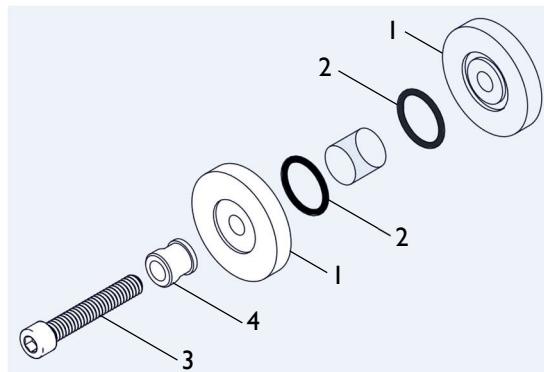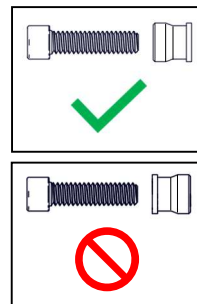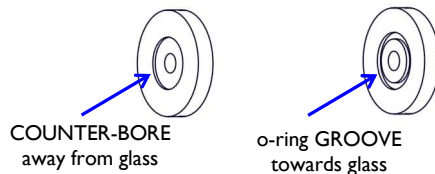

2

MOUNTING INSIDE HANDLE/BAR


- Position BAR (5) so that POST (5a) is on BASE RING (1)
- Loosely fasten SCREW (3) into POST (5a)
- Repeat Steps 1 & 2 on other through-hole

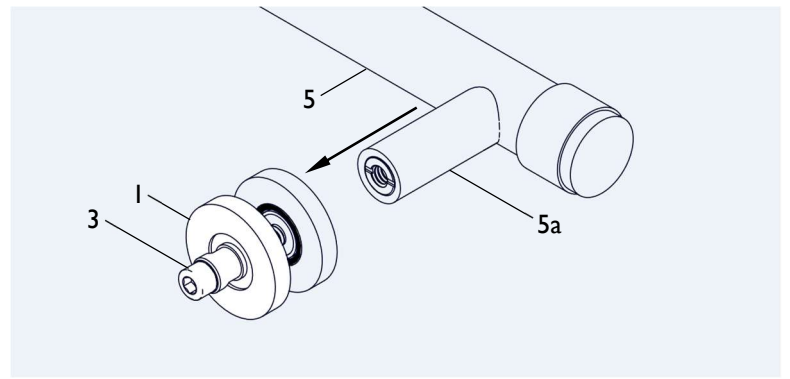

3

CHECKING & ADJUSTING LEVEL

- Use level to check that BASE RINGS (1) are level
- If not, loosen SCREW (3), adjust BASE RING (1) so that it is level with the other, then retighten using HEX KEY (6)

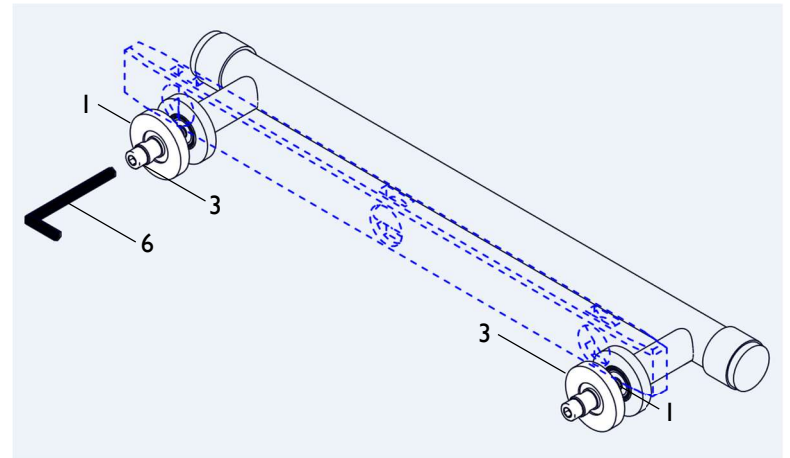

4

MOUNTING OUTSIDE HANDLE/BAR

- Place BAR (7) onto PLUGS (4) and slide up against BASE RINGS (1)
- Fasten SETSCREWS (7b) into POSTS (7a) using HEX KEY (8)

